

Brand List

95-1074TSR

Device : AUDIO, CBL, DVD, DVR, TAPE, TV, SAT, VCR, CD

2008 . 05. 08

CalRad Eelectronics

DEVICE : AUDIO

Maker (Brand) Name	Code Number (3 digit) List
ADC	007
ADCOM	225 161 092 082 057
AIWA	213 211 203 202 188 170 104 018
AKAI	189 138
AMC	174 171 127 126 125
95-1074TSR	054
ANGSTROM	142
ARCAM	141
AUDIO ACCESS	147
AUDIO FILE	071
AUDIO MATRIX	167
AUDIO TECHNICA	134
B & K	097 096
BOSE	224 170 070
CARVER	226 214 201 185 077 071 061 029 028 022 006
CASIO	076
CINEMA SOUND	134 001
CITATION	148 122
CLARION	026
CURTIS MATHES	076
DENON	234 229 215 109 037 027 011 002 001
ELNLIGHTENED AUDIO	099 098
FISHER	214 182 047
FOSGATE	231 062
LG(GOLDSTAR)	008
HARMAN KARDON	235 233 231 227 132 121 118 003
HITACHI	020
INKEL	222
JCPENNY	216 076
JENSEN	058
JVC	191 163 155 149 114 056
KENWOOD	222 199 192 190 182 181 162 151 146 145 066 026 005
KOSS	216
KRELL	072
CalRad Eelectronics	
LEXICON	194 180 120
LINN	124
LUXMAN	165 139 137 115 052 009 004
LXI	076
MAGNAVOX	208 164 152 086
MARANTZ	186 185 063 054 040 031 028 025 006
MCINTOSH	178
MCS	076
MERIDIAN	100 013 012
MINIBISHI	204 153
MONDIAL	158 157 112 081 043 042
NAD	186 176 113
NAKAMICHI	183 172 150 111 103
ONKYO	209 187 179 130 108 107 090 084 080 079 046 017
OPTIMUS	138 041 026

DEVICE : AUDIO

Maker (Brand) Name	Code Number (3 digit) List
PANASONIC	237 195 032
PHILIPS	063 038 034 025
PIONEER	198 168 159 116 078 069 050 045 044 039 035 033 014
PROCEED	144 135
RCA	156 117 067 048 010
REALISTIC	095 075 073 056 019
ROTEL	085 083 074
SAMSUNG	016
SANSUI	228 119 110 065 048 040
SANYO	059 047
SCOTT	091 019
SEARS	076
SHARP	181 175 131 094 026
SHERWOOD	106 105 102 055 051 030 024
SONY	236 218 184 166 160 101 093 088 064 053 018 015
SOUNDESIGN	036
SSI	068
TAEKWANG	138
TEAC	217 212 111 049 019 005
TOSHIBA	198 140 060
YAMAHA	232 205 177 173 169 129 089 067 026 023 021
ZENITH	210 143

DEVICE : CBL

Maker (Brand) Name	Code Number (3 digit) List
ABC	205 200 103 053 046 039 004
AMRICAST	099
ANTRONIT	014
ARCHER	014 007
BELL SOUTH	099
95-1074TSR	092
CENTURY	007
CITIZEN	007
COMBANO	081 080
COMSAT	074
COMTRONICS	030
DIGICABLE	206
EAGLE	040 030 020
EASTERN	066 057
EHOSTAR	106
ELECTRICORD	032
GEMINI	201 054
GENERAL ELECTRIC	072
GENERAL INSTRUMENT	104 103 074
GNC	099
GOLDN CHANNL	030
HAMLIN	255 055 049
HITACHI	103 055
JERROLD	201 200 103 101 074 069 010 009 004 002
MAGNAVOX	095 094 079 012 010
MEDIA ONE	107
MEMOREX	052
MITSUBISHI	102
M-NET	204
MOTOROLA	115 001
MOVIE TIME	032 028
NOVAPLEX	092
NSC	071 038 028 015
OAK	204 053 037 031
CalRad Eelectronics	
PARAGON	052
PHILIPS	095 085 020 017 013 012 006
PIONEER	203 122 121 120 105 103 063 051 034
PRUCER	059
PTS	202 074 071
PULSAR	052
RCA	047
RECOTON	098
REGAL	255 049
REGENCY	057
SAMSUNG	030
SCIENTIFIC ATLANTA	210 209 208 207 205 202 200 122 118 117 114 111 110 046 045 043 042 041 011 002
SIGNAL	030

DEVICE : CBL

Maker (Brand) Name	Code Number (3 digit) List
SIGNATURE	103
SL MARX	030
SONY	214 213 212 211
PRUCER	078 047
STARCOM	201 009 004 002
STARGATE	201 104 097 030
TADIRAN	030
TIME WARNER	043
TOCOM	056 040 039 003
TOSHIBA	052
UNIKA	014 007
UNITED CABLE	053 004
UNIVERSAL	035 032 014 007
VIEWSTAR	089 088 087 086 018 015 012
ZENITH	108 100 093 060 052 008

DEVICE : DVD

Maker (Brand) Name	Code Number (3 digit) List
APEX DIGITAL	153 220
CYBERHOME	165
DAEWOO	171
DENON	240 226
EMERSON	158
95-1074TSR	243 231
GO-VIDEO	160 159
GRADIENTE	201
HARMAN KARDON	255 225 218
JVC	238
KLH	223
KENWOOD	224
LG(GOLDSTAR)	249 247 241 235
MAGNAVOX	237 168 163
MARANTZ	217
mitsubishi	227
NAD	221
ONKYO	233 001
PANASONIC	234 228 167 164 157 152 149
PHILIPS	237 166 168
PIONEER	230 229
PROCEED	219
PROSCAN	231 229
RCA	243 231 170
SAMSUNG	248 161
SHARP	222 202
SONY	244 232 204 169
SYLVANIA	172 150
THOMPSON	243 231
TOSHIBA	250 245 233 162 151
YAMAHA	246 234
ZENITH	247 241 235

CalRad Eelectronics

DEVICE : DVR

Maker (Brand) Name	Code Number (3 digit) List
TIVO	006 005 002 001
DAEWOO	004 003
ECHOSTAR	016 015 014
EXPRESSVU	014
HUGHES	017
95-1074TSR	018
KEEN	009
PANASONIC	023 010
PHILIPS	024 017 011
PROSCAN	019
RCA	019
REPLAYTV	026 025 012 010 008
SONICBLUE	012 010
SONY	024 023 022 021 020 013 007

DEVICE : TAPE

Maker (Brand) Name	Code Number (3 digit) List
AIWA	114 100 071 015
CARVER	036 027 008 006
DENON	229 227 105
FISHER	064
LG(GOLDSTAR)	011
95-1074TSR	255 233
JVC	240 239 116 106
KENWOOD	181 146 064 026 023 013 005
LINN	124
LUXMAN	139 137 035
MAGNAVOX	027
MARANTZ	087 065 056 027 014
MCINTOSH	238
mitsubishi	243 242
NAD	048 029
NAKAMICHI	245 244 025
ONKYO	247 115 019 018 017 016 012 002
OPTIMUS	055 054 026
PANASONIC	195 088 032 010 007
PHILIPS	087 027
PIONEER	222 098 066 050 047 039 003
QUASAR	088 007
SANSUI	224 119 113 027
SHARP	181 026
SONY	246 089 084 052 022 020
TEAC	009
TECHNICS	193 122 109 088 076 010 007
TOSHIBA	112
VICTOR	106
YAMAHA	067 040 031 026 021

DEVICE : TV

Maker (Brand) Name	Code Number (3 digit) List
AIWA	213
ADMIRAL	161 160 081 072
ADVENT	231
AKAI	146 001
AMARK	143
95-1074TSR	157 073
AMSTRAD	052
ANAM	242 131 080 056 043
AOC	058 004 001
APEX	247
AUDIOVOX	076
BLAUPUNKT	088
BROKSONIC	241
CAIRN	201
CANDEL	004 003 002 001
CAPEHART	058
CETRONIC	043
CITIZEN	143 103 101 043 004 003 002 001
CLASSIC	043
CONCERTO	004
CONTEC	051 050 043
CORNEA SYSTEM	246
CORONADO	143
CRAIG	043
CROWN	143 043
CURTIS MATHES	143 101 004 001
CXC	043
DAEWOO	143 127 125 114 103 076 044 043 016 004
DAYTRON	143 004
DWIN	177
DYNASTY	043
DYNATECH	062
EIKI	187
ELECTROHOME	196 143 076 024
CalRad Eelectronics	001
FISHER	057 007
FUJITSU	244 243 198
FUNAI	245 043 028
FUTURETECH	043
GE	215 165 161 160 157 155 144 091 074 073 056 034 009 008 004 001
GRADIENTE	218
HAIER	203
HALL MARK	004
HITACHI	158 143 075 072 023 012 011 010 009 004
INFINITY	249 164
JBL	249 164
JCPENNY	160 156 143 101 065 030 024 009 008 004 001
JENSEN	013
JVC	237 230 199 145 083 070 038 034

DEVICE : TV

Maker (Brand) Name	Code Number (3 digit) List
KEC	043
KENWOOD	070 001
KLOSS	059 002
KMC	143
KTV	250 154 143 043 001
LG(GOLDSTAR)	253 143 127 119 106 102 004
LODGENET	072
LOEWE	249
LOGIK	072
LUXMAN	044
LXI	249 164 160 081 052 015 007
MAGNAVOX	249 235 223 222 216 210 205 164 160 127 094 064 063 061 060 059 022 004 003 001
MARANTZ	249 164 001
MATSUI	164
MEMOREX	226 072 007 004
METZ	088
MGA	042 028 024 004 001
MINERVA	088
MITSUBISHI	225 204 191 146 134 124 115 109 100 042 040 028 024 004
MOTOROLA	255 217
MTC	101 062 004 001
NAD	025 015
NEC	134 056 040 024 019 016 001
NIKEI	043
ONKING	043
ONWA	043
OPTONICA	081 019
ORION	226
PANASONIC	250 249 238 236 234 227 213 164 080 056 034
PHILCO	164 064 063 060 059 056 024 004 003 001
PHILIPS	249 235 205 164 127 093 059 038 005 004 003 001
PIONEER	190 135 025 023 018 001
PORTLAND	143 004
PROSCAN	197 165 161 160 144
PROTON	173 171 143 131 058 004
QUASAR	250 056 034
RADIO SHACK	143 127 043 019 004
RCA	228 221 220 208 165 161 160 156 152 144 074 065 056 024 023 004 001
REALISTIC	047 043 019 007
ROCTEC	186
RUNCO	182 168 157 073
SAMPO	202 058 004 001
SAMSUNG	252 251 248 209 160 143 127 107 105 101 089 050 004
SANYO	224 212 187 082 057 053 020 007
SCOTT	143 048 043 028 004
SEARS	165 160 143 094 082 057 030 028 015 007 004
SHARP	239 207 175 170 143 081 029 028 022 019 014 004
SIEMENS	088

DEVICE : TV

Maker (Brand) Name	Code Number (3 digit) List
SIGNATURE	072
SONY	233 219 214 194 147 139 126 085 070 067
SOUNDESIGN	043 028 004 003
SSS	043 004
SUPRE MACY	002
SYLVANIA	249 245 240 229 211 164 160 127 064 063 060 059 044 003 001
SYMPHONIC	245
TANDY	081
TATUNG	062 056
TECHNICS	080 034
TECHWOOD	004
TEKNIKA	143 101 072 043 028 024 004 003 002
TELEFUNKEN	087 086 046 037
TELERENT	072
TERA	172
THOMAS	245
TMK	004
TOSHIBA	254 232 206 138 101 062 040 030 015 007
TOTEVISION	143
UNIVERSAL	009 008
VANTAGE	193
VIDEO CONCEPTS	146
VIDIKRON	192 188 184 174
VIDTECH	004
WARDS	249 164 143 074 072 064 063 061 060 034 028 019 009 008 004
WESTING HOUSE	245 076
YAMAHA	004 001
YORK	004
YUPITERU	043
ZENITH	157 103 095 073 072

DEVICE : SAT

Maker (Brand) Name	Code Number (3 digit) List
ALPHASTAR	123
BIRDVIEW	129 051
CHANNEL MASTER	055 036 018 014 013
CHAPARRAL	077 012 009 008
CITOH	054
95-1074TSR	141 116 112 052 011 010 007 006 005
DX ANTENNA	204 076 056 046
ECHOSTAR	190 184 183 122 100 099 098 097 096 095 094 093 057 040 038
	029
ELECTROHOME	089
FUJITSU	207 203 202 133 017
GENERAL ELECTRIC	151 150 106
GENERAL INSTRUMENT	209 148 101 059 031 016 004 003
HITACHI	140 139
HOME CABLE	080 044 209
HOUSTON TRACKER	057 051 039 037 033
HUGHES	187 155 154 068 021
HYUNDAI	149
ICR	023
JANIEL	147 060
KATHREIN	108
LEGEND	057
LUXOR	144
MACOM	065 063 059 010
MEMOREX	057
NEXTWAVE	208 125 124
NORSAT	070 069
PACE	143 019
PANASONIC	142 060
PANSAT	121
PERSONAL CABLE	117
PHILIPS	192 188 187 180 153 152 071 025 024
PL	206 023
PRESIDENT	200 102
CalRad Eelectronics	
PROSAT	072
PROSCAN	151 150 106
RCA	191 157 151 150 106 027 022
REALISTIC	074 043
SAMSUNG	189 123
SATELLITE SERVICE	208 047
SONY	186 156 103 028
STARCAST	041
SUPERGUIDE	125 124
TEECOM	206 137 130 107 090 087 075 023
TOSHIBA	127 002
TOWN & COUNTRY	206 023
UNIDEN	205 136 101 086 080 079 078 049 048 045 044 043 042 016
VIEWSTAR	115
WINEGARD	128
ZENITH	120 091 084 083 082 081 020

DEVICE : VCR

Maker (Brand) Name	Code Number (3 digit) List
AIWA	161 034
AKAI	146 142 125 124 046 043 016
AMPRO	072
ANAM	083
AUDIO DYNAMICS	043 039 023 012
95-1074TSR	129 037
CANON	083 028
CAPEHART	108
CRAIG	135 104 001
CURTIS MATHES	083 041
DAEWOO	117 112 111 110 108 065 010 007 005
DAYTRON	108
DBX	043 039 023 012
DYNATECH	053 034
ELECTROHOME	059
EMERSON	167 131 129 117 106 083 046 037 036 034 025 006
FISHER	010 009 008 001
FUNAI	034
GE	147 144 109 107 083 072 063
GO VIDEO	168 155 136 132 104
LG(GOLDSTAR)	123 114 106 020 012
HARMAN KARDON	045 012
HITACHI	160 150 063 043 034 026 020
INSTANTREPLAY	083
JCL	083
JCPENNY	106 104 083 020 012
JENSEN	043
JVC	152 150 130 083 060 055 050 048 043 012
KENWOOD	048 047 034 014
LLOYD	034
LXI	106 034 009 001
MAGIN	104
MAGNAVOX	164 156 083 067 041 034
MARANTZ	083 069 067 012
CalRad Eelectronics	
MATSUI	030
MEI	083
MEMOREX	139 134 106 104 083 072 053 034 014 010 001
MGA	059 046 045
MINOLTA	020
MITSUBISHI	203 151 142 061 059 051 049 046 045 020
MOTOROLA	201
MTC	104 034
MULTITECH	034 024
NEC	048 043 039 023 012
NORDMENDE	043
OPTONICA	054 053
ORION	025
PANASONIC	217 216 211 210 202 145 140 133 083 074 070
PENTAX	083 063 020

DEVICE : VCR

Maker (Brand) Name	Code Number (3 digit) List
PHILCO	083 067 034
PHILIPS	106 083 071 067 054 034
PILOT	106
PIONEER	048 021 020
PORTLAND	108
PROSCAN	205 204
PULSAR	072
QUARTZ	041 002
QUASAR	145 083 075
RADIO SHACK	123
RCA	209 158 147 145 144 140 109 107 104 041 034 020
REALISTIC	106 104 083 054 053 034 014 010 008 001
RICO	058
RUNCO	148
SALORA	014
SAMSUNG	208 168 125 122 113 112 109 107 104 083 032
SANSUI	135 048 043
SANYO	134 104 014 010 007 001
SCOTT	131 129 112 037
SEARS	112 106 081 073 020 014 010 009 008 001
SHARP	215 165 159 083 054 053
SHINTOM	024
SIGNATURE	034
SONY	212 206 154 083 078 076 058 057 056 053 052 001
SOUNDESIGN	034
STS	020
SYLVANIA	220 219 083 067 059 034
SYMPHONIC	034
TANDY	034 010
TATUNG	043 039
TEAC	043 039 034
TECHNICS	083 070
TEKNIKA	106 083 034 019
THOMAS	034
TMK	006
TOSHIBA	221 131 112 082 081 059 047 042 020 008
TOTEVISION	106 104
UNITECH	104
VECTOR RESEARCH	012
VICTOR	048
VIDEO CONCEPTS	141 046 034 012
VIDEOSONIC	104
WARDS	131 104 083 054 053 034 024 020 001
YAMAHA	043 039 034 012
ZENITH	207 167 106 080 072 058 056 048 034

DEVICE : CD

Maker (Brand) Name	Code Number (3 digit) List
ADCOM	062 042
AIWA	187 170 122 105 089 088 065 059
AKAI	202 195 085
AMC	232 231
ARCAM	238
95-1074TSR	147 119
AUDIO TECHNICA	046
BSR	057 037
CALIFORNIA AUDIO	103 008
CAPETRONIC	063
CARRERA	080 057
CARVER	204 203 185 167 139 138 135 134 130 107 086 050 044 041
CASIO	182 111
CLARINETTE	182
CREEK	159
CROWN	035
DENON	123 002
EMERSON	102 069 042
FISHER	185 134 050 008
FRABA	111
GENEXXA	102 069 010
LG(GOLDSTAR)	080
HAITAI	093
HARMAN KARDON	255 001 208 047 033 018
HITACHI	175 042
INKEL	144 143 130
IPOD	249
JC PENNY	141 092 061 014
JENSEN	158
JVC	243 214 213 163 136 022 004
KENWOOD	185 142 137 072 071 055 023 007
KOSS	061
KRELL	241
KYOCERA	005
CaRad Eelectronics	
LUXMAN	076 070 028 011
LXI	059
MAGNAVOX	107 044
MARANTZ	209 107 077 051 044 041 027
MCINTOSH	212
MCS	092 073 014
MEMOREX	010
MISSION	107 044
MITSUBISHI	179
MITSUMI	153
MODULAIRE	182
MONDIAL	147
MYRYAD	244
NAD	178 067 005
NAKAMICHI	219 218 217 095

DEVICE : CD

Maker (Brand) Name	Code Number (3 digit) List
NEC	062 014
NIKKO	046
NSM	107 044
ONKYO	169 168 039 038 030
OPTIMUS	195 093 085 083 081 058 057 050 010
PANASONIC	254 201 172 103 068 008
PARASOUND	233
PHILIPS	044 041
PIONEER	176 175 174 056 025 020 010
PROCEED	239
PROTON	228 107 044
QUASAR	103 008
RADIO SHACK	182
RCA	150 042 017
REALISTIC	187 182 181 102 051 050 042
ROTEL	250 178 161 107 044
SAE	107 044
SANSUI	190 171 128 125 107 069 044
SANYO	050
SCOTT	102 069
SHARP	066 051 031 026
SHERWOOD	166 119 115 112 096 051 019 003
SIGNATURE	033
SONY	253 252 226 225 177 164 133 126 081 048
SOUNDESIGN	251
SUMO	155
SYLVANIA	107 044
SYMPHONIC	181 052
TAEKWANG	195 085
TANDY	010
TEAC	140 131 101 079 052 051 036 015
TECHNICS	184 172 103 068 060 008
TECHWOOD	076
THETA DIGITAL	235 234
TOSHIBA	160 148 091 067
VECTOR RESEARCH	080
VICTOR	124 114 022 004
WARDS	185 033
YAMAHA	245 186 183 054 046 024
YORX	182